

DOOR ADJUSTMENT



Photo showing adjustment is still available from hinge plate to door frame.



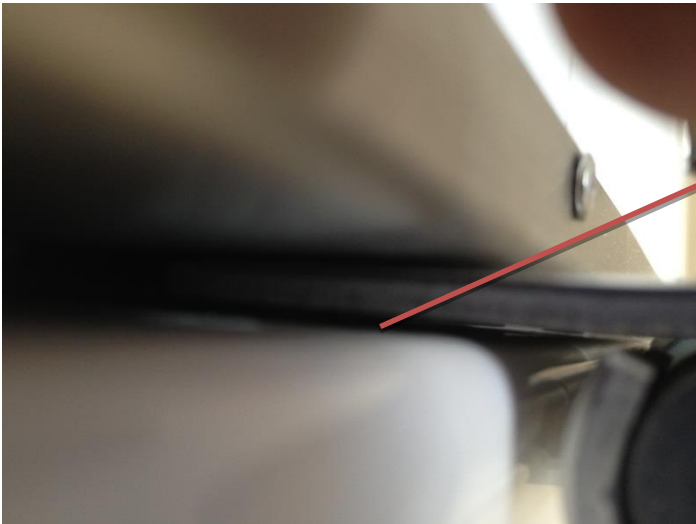



Photo Show's no adjustment is left. Hinge plate is nearly touching door frame, any further adjustment will make the door hinge bound.

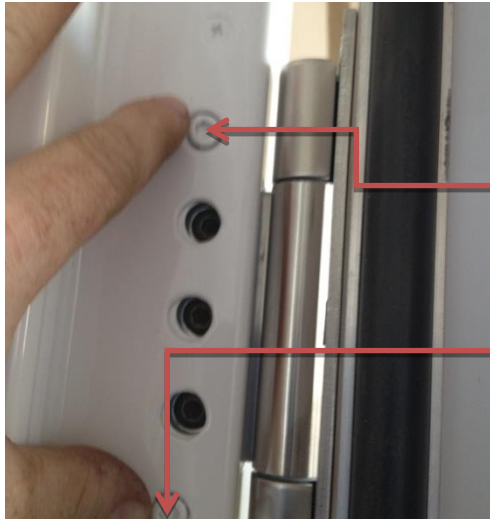

Hinge Adjustment Screws: 2 per hinge

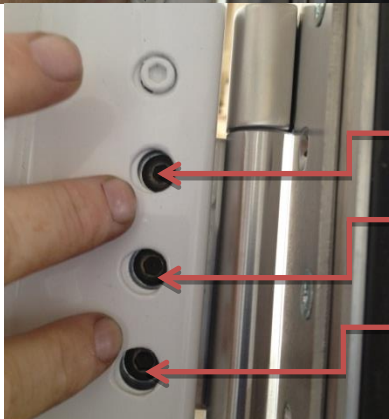

Hinge Plate clamping screws. This allows the door to be moved up and down in and out. CAUTION: undoing these screws will make door/hinge will come out of the doorframe. Prop door from the floor with wedges allowing you to adjust door.

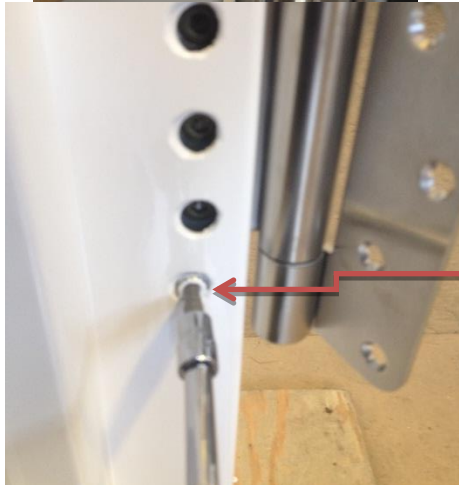

Hinge being adjusted (2 white screws – top and bottom).  
 Clockwise moves door towards keep  
 Anti-clockwise moves door away from keep  
 Caution: Do not round off adjusting screws head. Put Alan key into holder and tap gently with hammer.

Please check that door has not been wedged open by inserting wood between door and hinge side of frame, therefore distorting door frame leg or hinge adjusting box. We have come across this in the past.

Make sure the upright door frame is straight. We have had damage in the past due to forklift operators.